



Please read this document carefully before using this product. The guarantee will be invalidated if the device is damaged by not following instructions detailed in the manual. The company shall not be responsible for any damage or losses however caused, which may be experienced as a result of the installation or use of this product.

ENDA EDT2423 TEMPERATURE CONTROLLER

Thank you for choosing ENDA EDT2423 temperature controller.



CE **RoHS**
Compliant

- *35x77mm sized.
- *On-Off control.
- *Three relay outputs for cooling, defrost and fan control.
- *Two NTC probe inputs for cooling and defrost control.
- *Offset value can be entered for NTC probe.
- *Compressor protection parameters can be entered.
- *In the keys of probe failure, output state can be selected on, off or periodical running.
- *The ability to defrost the evaporator temperature and time dependent or manual.
- *Upper and lower limits of the setpoint can be adjusted.
- *Defrosting duration and interval can be adjusted.
- *Upper and lower limits of the alarm value can be adjusted depending on the setpoint value.
- *Temperature unit can be selected °C or °F.
- *Digital input. (Optional)
- *It can give an external alarm with digital input.
- *With digital input defrost starting feature.
- *Without energy to the device can be transferred parameter with "ENDAKEY".
- *With RS485 ModBus protocol communication feature.(optional)
- *With Real Time Clock making defrost and energy-saving feature.
- *CE marked according to European Norms.

Order Code: EDT2423 - $\square\square\square$ - \square - $\square\square\square$ - \square
1 2 3 4

1 - Supply Voltage

230.....230V AC
2424V AC/DC
1212V AC/DC
SM.....9-30V DC/7-24V AC

2-Output

R..... 8A relay output

4-ModBus



RS.....ModBus (optional)

3- RTC

Real Time Clock (optional)




ENDA EDT2423 is intended for installation in control panels. Make sure that the device is used only for intended purpose. The electrical connections must be carried out by a qualified staff and must be according to the relevant locally applicable regulations. During an installation, all of the cables that are connected to the device must be free of electrical power. The device must be protected against inadmissible humidity, vibrations, severe soiling and make sure that the operation temperature is not exceeded. The cables should not be close to the power cables or components.

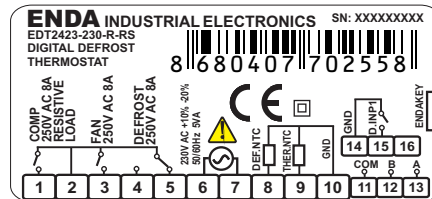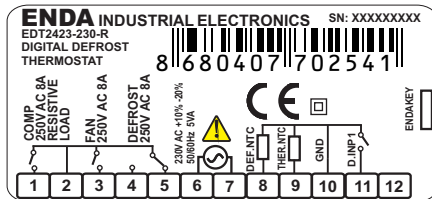

Equipment is protected throughout by DOUBLE INSULATION

Holding screw 0.4-0.5Nm.

NOTE: SUPPLY:

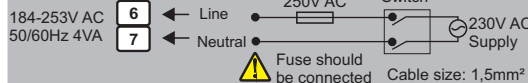

Note:

- 1) Mains supply cords shall meet the requirements of IEC 60227 or IEC 60245.
- 2) In accordance with the safety regulations, the power supply switch shall bring the identification of the relevant instrument and it should be easily accessible by the operator.

ENVIRONMENTAL CONDITIONS

Ambient/storage temperature	0 ... +50°C/-25 ... 70°C (without icing)
Relative humidity	%80, up to 31°C decreasing linearly %50 at 40°C.
Protection class	According to En60529; Front panel: IP65 Rear panel : IP20
Height	Max. 2000m



Do not use the device in locations subject to corrosive and flammable gasses.

ELECTRICAL CHARACTERISTICS

Supply voltage	230V AC +%10 -%20, 50/60Hz or 12/24 V AC/DC \pm %10
Power consumption	Max. 5VA
Connection	2.5mm ² screw-terminal connections
Scale	-60.0 ... +150.0°C (-76.0 ... +302.0°F)
Sensitivity	0.1°C (Can be chosen as 0.1°C or 1°C.)
Accuracy	\pm 1°C
Time accuracy	\pm 1%
Display	4 digits, 12.5mm, 7 segment LED
EMC	EN 61326-1: 2012
Safety requirements	EN 61010-1: 2010 (Pollution degree 2, overvoltage category II)

OUTPUTS

Compressor relay output	For EDT2423-X-R ; Relay:NO 250V AC,8A (for resistive load), 1/2hp 240V AC (for inductive load)
Defrost relay output	For EDT2423-X-R ; Relay:NO+NC 250V AC,8A (for resistive load), 1/2hp 240V AC (for inductive load)
Fan relay output	For EDT2423-X-R Relay: ;NO 250V AC,8A (for resistive load), 1/2hp 240V AC (for inductive load)
Life expectancy for relay	For EDT2423-X-R ; Without load 30.000.000 switching; 250V AC, 8A resistive load 100.000 electrical operation.

CONTROL

Control type	Single set-point, alarm and fan control
Control algorithm	On-Off control
Hysteresis	Adjustable between 1 ... 20.0°C.

HOUSING

Housing type	Suitable for flush -panel mounting
Dimensions	W77xH35xD61mm
Weight	Approx. 190g (After packing)
Enclosure material	Self extinguishing plastics.






While cleaning the device, solvents (thinner, benzene, acid etc.) or corrosive materials must not be used.

DIMENSIONS



For removing mounting clamps:

- Push the flush-mounting clamp in direction 1 as shown in the figure below. Then, pull out the clamp in direction 2.

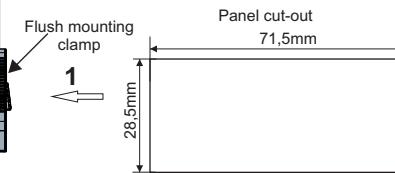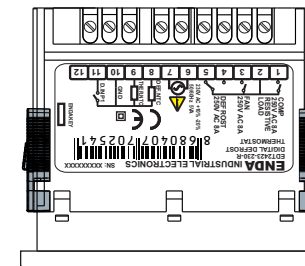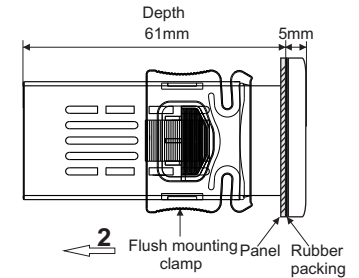

Note :
1) Panel thickness should be maximum 7mm.
2) If there is not 60mm free space at the back side of the device, it would be difficult to remove it from the panel.



SİSEL MÜHENDİSLİK ELEKTRONİK SAN. VE TİC. A.Ş.
Şerifali Mah. Barbaros Cad. No:18 Y.Dudulu 34775
ÜMRANİYE/İSTANBUL-TÜRKİYE
Tel : +90 216 499 46 64 Pbx. Fax : +90 216 365 74 01
url : www.enda.com.tr



EDT2423-E-04-201410



- °F FAHRENHEIT LED:** In parameter value or the measured temperature value "°F" unit while this LED lights up. In the hidden menu, at the same time the user menu parameter is shown the LED lights up.
- FAN LED:** Fan control is being checked; while the output is active, the LED lights. While fan delays are expected.
- DEFROST LED:** With the defrost lights up.
- COMPRESSOR LED:** If compressor output is active, this LED lights up. While these compressor delays are expected, this LED flashes.
- SET** (green square): While in the operating mode set value, while in the programming mode shows selected parameter's value.
- ▲** (green up arrow): While in programming mode, provides the transition to the next parameter. If parameter is being adjusted, it increases parameter's value. Constantly holding this key, the parameter value rapidly increases.
- ▼** (green down arrow): While in programming mode, provides the transition to the previous parameter. If parameter is being adjusted, it decreases parameter's value. Constantly holding this key, the parameter value rapidly decreases.

FRONT PANEL COMMANDS

1. Viewing and Changing The Set Value




While in the running mode, if **SET** key is pressed set value is displayed for 3 seconds. While in this case, the set value is changed with **▲▼** keys.

2. Viewing Defrost Measurement Value



While in the running mode; if **SET ▲** keys are pressed, defrost probe measurement value is displayed for 3 seconds

3. Locking and Unlocking Keys

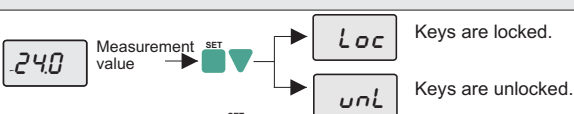


While in the operating mode, if **SET ▼** keys are pressed together among 2 seconds the **Loc** message is displayed and the keys are locked. If the keys are locked **SET ▼** keys are pressed for 2 seconds again **unL** message is displayed and key lock is opened and is returned to the normal way of working. While keys are locked, if **SET** key is pressed, the set value can be displayed but the value can not be changed. While the keys are locked, **SET** key outside if a key is pressed the **Loc** message is seen.

4. Manual Defrost Process

While in the operating mode, if **▲** key is pressed for 2 seconds the defrost process is started as manual. If **dur = 0**, the manual defrost will also be disabled.

5. Activating / Inactivating The Control Outputs

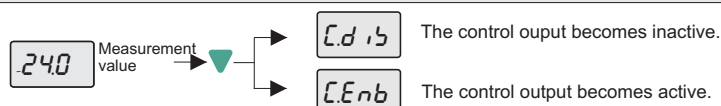

* When in the running mode, if the control outputs are inactive, **OFF** message displays periodically.


When in the running mode, if **▼** key is pressed for 2 seconds, **Cdis** message is displayed and control outputs becomes to the inactive position, the device works as the indicator. When the control outputs are disabled; if **▼** key is pressed for 2 seconds **CEnb** is disabled and the device continues to do control function.

6. Changing Parameter Values

▲ Keys are pressed together for 2 seconds **LP17** is displayed and the user menu is entered, afterwards first parameter's name is displayed in the user menu.

While a parameter was selected, by pressing to **SET** key parameter's value is displayed, the displayed this parameter can be changed with **▲▼** keys. When the parameter name is shown, no action is done after 3 seconds or to the **SET** key is pressing again to return to the parameter's name. When the parameter name is shown, **▲▼** keys are pressed together immediately without waiting to get out of this process.

Program mode

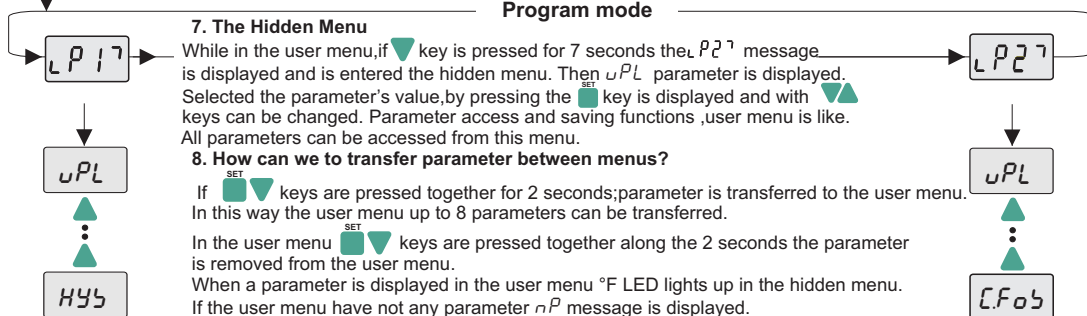

7. The Hidden Menu

While in the user menu, if **▼** key is pressed for 7 seconds the **LP27** message is displayed and is entered the hidden menu. Then **uPL** parameter is displayed. Selected the parameter's value, by pressing the **SET** key is displayed and with **▲▼** keys can be changed. Parameter access and saving functions, user menu is like. All parameters can be accessed from this menu.

8. How can we to transfer parameter between menus?

If **SET ▼** keys are pressed together for 2 seconds; parameter is transferred to the user menu. In this way the user menu up to 8 parameters can be transferred. In the user menu **SET ▼** keys are pressed together along the 2 seconds the parameter is removed from the user menu. When a parameter is displayed in the user menu **°F** LED lights up in the hidden menu. If the user menu have not any parameter **nP** message is displayed.

ERROR MESSAGES


PFR	Means, thermostat probe is broken.	PSC	Means, thermostat probe is short circuit.	PFR2	Means, thermostat probe is broken.
---	Temperature value is higher than the scale.	---	Temperature value is lower than the scale.	PSC2	Means, thermostat probe is short circuit.

ALARM SITUATION

- When the alarm situation occurred, the measured value flashes in the indicator and if **snd** parameter is not "0" is given audible alarm by the device. While there are a audible warning; **▲** key is pressed, the audible warning will be disabled.
- External alarm is activated but output's is not affected by this situation.
- Except that the alarm has been activated and external alarm output relay is active when the show shut down. (off situation).

HOW CAN WE RETURN THE DEVICE TO THE FACTORY SETTINGS

▼ Key is held down while the device is powered up the **dPAR** message will see and restore the factory parameters.

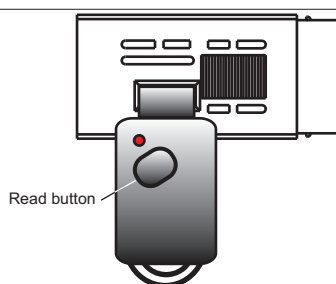

HOW CAN WE DOWNLOAD THE PARAMETERS FROM ENDAKEY TO THE DEVICE?

While in the running mode; if key or "Read" button (in ENDAKEY) are pressed; is displayed "dL" message and parameters are read in ENDAKEY. "dL" message appears when the key is pressed again, reading parameter values from the ENDAKEY are transferred to the device. If the parameter transfer is successful, "rEF" message is displayed and the device begins to work with downloaded parameters value. The parameter in the ENDAKEY, while belonging to a different device of if there is a malfunction in the ENDAKEY "Err" message is displayed and the parameters of the device unchanged.

HOW CAN WE UPLOAD THE PARAMETERS FROM DEVICE TO THE ENDAKEY?

While in the running mode; if key is pressed "uL" message is displayed and again key is pressed; if there is no error, the parameters in the device are loaded in to the ENDAKEY and "suc" message is displayed. If there is a malfunction in the device and the installation failed "Err" message is displayed.

NOTE 1: To the device without energy, the parameter transfer is done with ENDAKEY. The battery inside the ENDAKEY for a longer period of time; after the parameter transfer process, the connection between the ENDAKEY and the device should be disconnected.

NOTE 2: ENDAKEY device, is supplied with orders if requested.

		MIN.	MAX.	UNIT	DEF. SET
CONTROL PARAMETERS					
<i>uPL</i>	The upper limit of the setpoint	-600	<i>uPL</i>	°C/°F	150
<i>LoL</i>	The lower limit of the setpoint	<i>LoL</i>	1500	°C/°F	-60
<i>HYs</i>	Switch hysteresis for compressor (hysteresis)	0.1	20.0	°C/°F	2
<i>oFF</i>	The offset value for the refrigeration	-200	200	°C/°F	0
CONFIGURATION PARAMETERS					
<i>Un it</i>	Temperature unit	°C	°F		°C
<i>dPnt</i>	Decimal point (<i>no</i> = decimal point isn't shown 22°C, <i>YE s</i> =decimal point is shown 22.3°C.)	<i>no</i>	<i>YE s</i>		<i>no</i>
<i>d inP</i>	Digital input types. <i>nd</i> : Digital input unused. <i>ER</i> : External alarm. <i>ER</i> message flashes in the display. Output unchanged. <i>SR</i> : Important external alarm. <i>SR</i> message flashes in the display. Relay output is turned off. <i>Fan</i> : Enable or disable <i>dF</i> : Defrost operation is started.	<i>nd</i>	<i>dF</i>		<i>nd</i>
<i>dd i</i>	Digital input delay. The period of the digital inputs to be active.	00:00	99:00		1:00
<i>dPo</i>	Digital input polarity. <i>CL</i> = While a digital input contact is closed, it is activated. <i>oP</i> = While a digital input is opened, it is activated.	<i>CL</i>	<i>oP</i>		<i>CL</i>
COMPRESSOR PROTECTION PARAMETERS					
<i>CPon</i>	Delay time for the compressor after power is on.	00:00	99:00	min:sec	1:00
<i>CFos</i>	Delay time required for the compressor to restart following a stop.	00:00	99:00	min:sec	1:00
<i>CPPr</i>	On time for the compressor output in the case of probe failure.	00:00	99:00	min:sec	0:00
<i>CPPF</i>	Off time for the compressor output in the case of probe failure	00:00	99:00	min:sec	1:00
DEFROST CONTROL PARAMETERS					
<i>dLYP</i>	Defrost type selection. (<i>ELC</i> =Electrical defrost, <i>GRs</i> =Hot gas defrost)	<i>ELC</i>	<i>GRs</i>		<i>ELC</i>
<i>ddur</i>	Defrost duration (If <i>ddur</i> =0, automatic and manual defrost are disabled.)	00:00	99:00	min:sec	1:00
<i>d inE</i>	The time between 2 consecutive defrosts.	1:00	99:00	hr:min	1:00
<i>dStP</i>	Defrost shutdown temperature. (If evaporator temperature is bigger than this value, defrost is disable.)	-60	150	°C/°F	2
<i>ddSP</i>	During defrost, display configuration (<i>rE</i> = Real temperature is displayed during defrost. <i>LC</i> = The temperature which is measured before defrost is displayed during defrost.	<i>LC</i>	<i>FE</i>		<i>LC</i>
<i>ddrE</i>	Delay time for display real temperature after defrost is over.	00:00	99:00	min:sec	1:00
<i>dPon</i>	Defrosting process when the device is powered (<i>no</i> =Defrost process doesn't start when the device is powered. <i>YE s</i> =Defrost process starts when the device is powered.)	<i>no</i>	<i>YE s</i>		<i>no</i>
<i>ddPo</i>	Delay time for defrosting after power is on.	00:00	99:00	min:sec	1:00
<i>ddrE</i>	Spotting-water discharge time	00:00	99:00	min:sec	2:00
ALARM CONTROL PARAMETERS					
<i>RuPL</i>	Limit for upper alarm level. When <i>RLYP</i> is changed, <i>RuPL</i> should be readjusted.	<i>RLoL</i>	1500	°C/°F	150
<i>RLoL</i>	Limit for lower alarm level. When <i>RLYP</i> is changed, <i>RLoL</i> should be readjusted.	-600	<i>RuPL</i>	°C/°F	60
<i>RHYs</i>	Switch hysteresis for alarm.	0.1	20.0	°C/°F	2
<i>RLYP</i>	Alarm configuration. (<i>Rbs</i> =Absolute alarm. Alarm values are <i>RLoL</i> and <i>RuPL</i> .) (<i>rEF</i> = Relative alarm. Alarm values are SET- <i>RLoL</i> and SET+ <i>RuPL</i> .) NOTE: Upper and Lower alarm level variables are determined according to the "RLYP" parameter. If <i>RLYP</i> = <i>Rbs</i> , <i>RLoL</i> and <i>RuPL</i> . If <i>RLYP</i> = <i>rEF</i> , <i>LoL</i> =SET- <i>RLoL</i> and <i>RuPL</i> .	<i>Rbs</i>	<i>rEF</i>		<i>Rbs</i>
<i>RdFL</i>	Time delay to display alarm message after alarm is on.	00:00	99:00	min:sec	0:00
<i>RdPo</i>	Time delay to display alarm message after power is on.	00:00	24:00	hr:min	1:00
<i>CLsr</i>	The holding parameter of control outputs state when the supply is powered off.	<i>no</i>	<i>YE s</i>		<i>YE s</i>
<i>ESr</i>	The holding parameter of keypad lock state when the supply is powered off.	<i>no</i>	<i>YE s</i>		<i>no</i>
FAN CONTROL PARAMETERS					
<i>FLon</i>	Operation of the fan with the thermostat (<i>no</i> =Fan runs continuously independent of the thermostat, <i>YE s</i> =Fan works with the thermostat)	<i>no</i>	<i>YE s</i>		<i>YE s</i>
<i>FStP</i>	The stop temperature of the fan	-600	1500	°C/°F	1
<i>FHYs</i>	The Fan differential	0.1	20.0	°C/°F	2
<i>FcSt</i>	When the compressor stops operation of the fan. (<i>no</i> = retains status of the fan. <i>YE s</i> = Fan stops with the compressor)	<i>no</i>	<i>YE s</i>		<i>YE s</i>
<i>FdSt</i>	Operation of the fan during defrost process. (<i>no</i> =retains status of the fan. <i>YE s</i> = Fan stops during the defrost process)	<i>no</i>	<i>YE s</i>		<i>YE s</i>
<i>FPon</i>	Delay time for the fan after power is on.	00:00	99:00	min:sec	1:00
<i>FStd</i>	After defrost, the period for the introduction of the fan.	00:00	99:00	min:sec	3:00
<i>Fctr</i>	Fan control to get to the room temperature? (<i>no</i> =evaporator temperature is higher <i>FStP</i> , the fan doesn't work. <i>YE s</i> =Room temperature difference between the temperature of the evaporator temperature is below of <i>FStP</i> . If the difference between room temperature and evaporator temperature is higher than <i>FStP</i> + <i>FHYs</i> , the fan runs again.	<i>no</i>	<i>YE s</i>		<i>no</i>

ENDA EDT2423 DIGITAL THERMOSTAT MODBUS PROTOCOL ADDRESS MAP

1.1 HOLDING REGISTERS

Holding Register Addresses		Data Type	Data Content	Parameter Name	Read/Write Permission	Status Value
Decimal	Hex					
0000d	0x0000	word	Set value	-	Readable/Writeable	-20
0001d	0x0001	word	Set point upper limit	uPL	Readable/Writeable	150
0002d	0x0002	word	Upper level alarm	RuPL	Readable/Writeable	150
0003d	0x0003	word	Set point lower limit	LoL	Readable/Writeable	-60
0004d	0x0004	word	Lower level alarm	RLoL	Readable/Writeable	-60
0005d	0x0005	word	The offset value for the cooling	oFF	Readable/Writeable	0
0006d	0x0006	word	Cooling hysteresis	HYs	Readable/Writeable	2
0007d	0x0007	word	Switch hysteresis for alarm	RHYs	Readable/Writeable	2
0008d	0x0008	word	Digital input types .0=nd;1=ER;2=5R;3=HC;4=dF	d.inP	Readable/Writeable	nd
0009d	0x0009	word	Digital input delay	ddi	Readable/Writeable	1:00(60 sec)
0010d	0x000A	word	Delay time for the compressor after power is on.	CPon	Readable/Writeable	1:00(60 sec)
0011d	0x000B	word	Delay time required for the compressor to restart following a stop.	CFos	Readable/Writeable	1:00(60 sec)
0012d	0x000C	word	On time for the compressor output in the case of probe failure	CPPn	Readable/Writeable	0:00(0 sec)
0013d	0x000D	word	Off time for the compressor output in the case of probe failure	CPPF	Readable/Writeable	1:00(60 sec)
0014d	0x000E	word	Defrost duration	ddur	Readable/Writeable	1:00(60 sec)
0015d	0x000F	word	The time between 2 consecutive defrosts.	d.int	Readable/Writeable	1:00(60 min)
0016d	0x0010	word	Delay time for defrosting after power is on.	ddPo	Readable/Writeable	1:00(60 sec)
0017d	0x0011	word	After the cooling process of cooling start-up delay	ddfP	Readable/Writeable	1:00(60 sec)
0018d	0x0012	word	Time delay to display alarm message after alarm is on.	RdFL	Readable/Writeable	0:00(0 sec)
0019d	0x0013	word	Time delay to display alarm message after power is on.	RdPo	Readable/Writeable	1:00(60 min)
0020d	0x0014	word	Defrost shutdown temperature.(If evaporator temperature is bigger than this value,defrost is disable.)	dStP	Readable/Writeable	2
0021d	0x0015	word	Spotting-water discharge time	ddrt	Readable/Writeable	2:00
0022d	0x0016	word	The stop temperature of the fan	FStP	Readable/Writeable	1
0023d	0x0017	word	The fan differential	FHYs	Readable/Writeable	2
0024d	0x0018	word	Delay time for the fan after power is on.	FPon	Readable/Writeable	1:00
0025d	0x0019	word	After defrost,the period for the introduction of the fan	FStd	Readable/Writeable	3:00
0026d	0x001A	word	RS485 Network address for the connection of the device. Adjustable between 1-247.	Rdr5	Readable/Writeable	1
0027d	0x001B	word	Baudrate (0=Off; 1=1200; 2=2400; 3=4800;4=9600; 5=19200)	bAud	Readable/Writeable	9600

1.2 INPUT REGISTERS

Input Register Addresses		Data Type	Data Content	Parameter Name	Read/Write Permission
Decimal	Hex				
0000d	0x0000	word	Prob-1 temperature value (°C / °F)	--	Only Readable
0001d	0x0001	word	Prob-2 temperature value (°C / °F)	--	Only Readable

1.3 DISCRETE INPUTS

Discrete Input Addresses		Data Type	Data Content	Parameter Name	Read/Write Permission
Decimal	Hex				
00d	0x00	Bit	Output situation -1 (Defrost relay)	--	Only Readable
01d	0x01	Bit	Output situation -2 (Compressor relay)	--	Only Readable
02d	0x02	Bit	Output situation -3 (Fan relay)	--	Only Readable

1.4 COILS

Coil Addresses		Data Type	Data Content	Parameter Name	Read/Write Permission	Status Value
Decimal	Hex					
00d	0x00	Bit	Temperature unit. OFF=°C ON=°F	<i>Unıt</i>	Readable/Writeable	°C
01d	0x01	Bit	Decimal point . OFF= <i>no</i> ON= <i>yes</i>	<i>dPnt</i>	Readable/Writeable	<i>no</i>
02d	0x02	Bit	During defrost,display configuration. OFF=The temperature which is measured before defrost is displayed.(<i>LC</i>) ON=Real temperature is displayed during defrost process. (<i>RE</i>)	<i>ddSP</i>	Readable/Writeable	<i>LC</i>
03d	0x03	Bit	Defrosting process begins with energy.OFF=Defrost process doesn't start when,the energy comes.(<i>no</i>) ON=Defrost process starts when the energy comes. (<i>yes</i>)	<i>dPon</i>	Readable/Writeable	<i>no</i>
04d	0x04	Bit	Alarm configuration .OFF=Absolute alarm (<i>AbS</i>) ON=Relative alarm (<i>REF</i>)	<i>AltYP</i>	Readable/Writeable	<i>AbS</i>
05d	0x05	Bit	Digital input polarity.OFF=While a digital input contact is closed,it is activated.(<i>CL</i>) ON=While a digital input is opened,it is activated(<i>oP</i>)	<i>dPo</i>	Readable/Writeable	<i>CL</i>
06d	0x06	Bit	Defrost type (OFF=Electrical defrost (<i>ELC</i>) ON=Hot gas defrost (<i>GAS</i>)	<i>dtYP</i>	Readable/Writeable	<i>ELC</i>
07d	0x07	Bit	Operation of the fan with the thermostat. OFF= <i>no</i> ON= <i>yes</i>	<i>FLon</i>	Readable/Writeable	<i>yes</i>
08d	0x08	Bit	When the compressor stops operation of the fan. OFF= <i>no</i> ON= <i>yes</i>	<i>FcSt</i>	Readable/Writeable	<i>yes</i>
09d	0x09	Bit	Operation of the fan during defrost process. OFF= <i>no</i> ON= <i>yes</i>	<i>FdSt</i>	Readable/Writeable	<i>yes</i>
10d	0x0A	Bit	Shall it depend on the room temperature? OFF= <i>no</i> ON= <i>yes</i>	<i>Fctr</i>	Readable/Writeable	<i>no</i>